



## SD-145s INSTALLATION GUIDE

### A. INSTALLATION BY DOUBLE-SIDED TAPE



#### Step 1:

- \* Clean wall with a clean wet rag.
- \* Wipe wall with an alcohol wipe.
- \* Let the wall dry at least a minute or two.



#### Step 2:

- \* Remove adhesive protective sheet.



#### Step 3 :

- \* Place on the wall above your waist line.
- \* Hold and press the dispenser against the wall for 2 minutes.



#### Step 4 :

- \* Open front cover with key.



#### Step 5 :

- \* Insert pouch into dispensing valve.
- \* Closed front cover.



#### Step 6 :

- \* Place a piece of tissue underneath and push to dispense

\* For Hand Sanitizing, place hand underneath dispenser and push to dispense



#### Step 7 :


- \* Wipe seat cover and let air dry for one second before use.

## B. INSTALLATION BY SCREW SET



### Step 1 :

- \* Open dispenser front cover with key.
- \* Detach front cover from back plate.

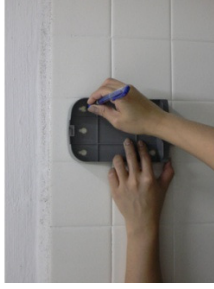

### Step 2 :

- \* Place back plate above your waist line against the wall.
- \* Mark holes on wall with pencil using back plate as a template.
- \* Drill marked holes with electrical drill.



### Step 3 :

- \* Insert plastic anchors provided into hole and knock lightly into position.
- \* Attached front cover back to back plate.
- \* Place back plate and align with holes.
- \* Turn screws into anchors and tightens screws.



### Step 4 :

- \* Insert pouch into dispensing valve.
- \* Closed front cover.



### Step 5 :

- \* Place a piece of tissue underneath and push to dispense.



### Step 6 :

- \* Wipe seat cover and let air dry for one second before use.

\* For Hand Sanitizing, place hand underneath dispenser and push to dispense